

### Caution

Please read all warnings for your safety and optimal user experience. Please read and follow these instructions carefully and retain for your records.

1. Disposal of a battery into fire or a hot oven, mechanically crushing or cutting of a battery, can result in an explosion.
2. Leaving a battery in an extremely high temperature can result in an explosion or the leakage of flammable liquid or gas.
3. A battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas.
4. The power bank will generate heat when charging. Always charge in a well-ventilated area. Do not charge under pillows, blankets or on flammable surfaces.
5. Keep the power bank away from heat sources, direct sunlight, combustible gas, humidity, water or other liquids.
6. Do not disassemble, open, microwave, incinerate, paint or insert foreign objects into the power bank.
7. Do not subject the power bank to mechanical shock such as crushing, bending, puncturing or shredding. Avoid dropping or placing heavy objects on the power bank.
8. Do not short circuit the power bank or store it in a receptacle where it may be short circuited by other metallic or conductive objects.

### Caution

9. Do not operate the power bank if it has been wet or otherwise damaged, to prevent against electric shock, explosion and/or injury. Contact the dealer or authorized agent.
10. Usage of power bank by children should always be supervised.
11. For IT/AV equipment use only.



This icon marked on the product indicates that this shall be for indoor use only.

Please note that changes or modifications not expressly approved by the party responsible for compliance could avoid the user's authority to operate the equipment. Cygnett takes no responsibility for damages caused by incorrect use of its products. Made in China.

Cygnett and the Cygnett logo are trademarks of Cygnett Pty Ltd.

#### **Cygnett Pty Ltd**

858 Lorimer St, Port Melbourne, Victoria 3207 Australia

#### **Cygnett UK Limited**

71-75 Shelton St, London, WC2H 9JQ

#### **Cygnett USA Inc**

3838 W Carson St, Ste 220, Torrance, CA 90503

#### **Cygnett EU**

 
Office 2, Goudstraat 65,  
2718RD Zoetermeer, The Netherlands

# CYGNETT

## CHARGEUP EXPLORER 200

---

### USER MANUAL

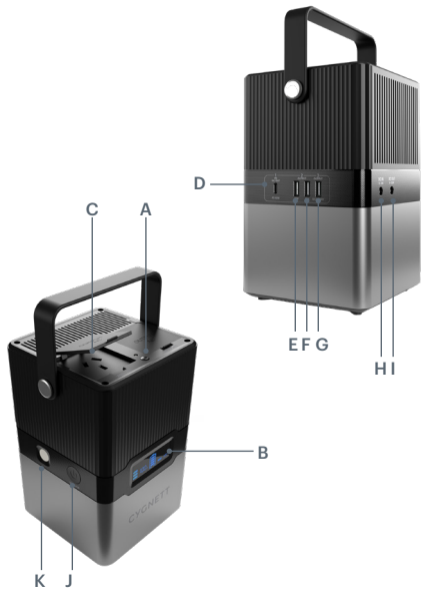

- A** AC power button
- B** Digital display
- C** AC outputs
- D** USB-C output & input
- E** USB-A output 1
- F** USB-A output 2
- G** USB-A output 3
- H** DC input
- I** DC output
- J** LED/power button
- K** LED light

#### Digital display

When in use, the digital display (B) will show the below information:

- AC total output/input power
- USB total output/input power
- Battery level

#### Charge your device via AC output

Connect your device/appliance's power plug into the AC output (C). Press the AC power button (A), and your device/appliance should be powered. When you are finished using the AC outputs, remove the power plug from the power station. Turn off the AC outputs by pressing and holding the AC power button (A).

#### Charge your device via USB output

Recharge your device by connecting a compatible cable into the USB-C output (D) or USB-A outputs (E/F/G). Your device should begin to charge automatically. When you are finished charging your device, remove the cables from the power station. Turn off the USB outputs by pressing and holding the LED/power button (J).

#### Charge your device via DC output

Power your device by connecting with the included female cigarette lighter adapter or a compatible DC output accessory into the DC output (I). Press the power button (A), and your device should begin to charge/power up. When you are finished with your devices, remove the accessory from the power station.

#### Recharge your power station

To recharge your power station, use the included wall charger and connect the pin into the DC input (H), then insert the power plug into a wall outlet. When recharging, the digital display (B) will show the remaining charge.

Alternatively, use a compatible USB-C cable and recharge your power station through the USB-C input (D).

#### LED light function

Press the LED/power button (J) to turn on the LED light (K). Press the LED power button (J) to cycle through SOS and strobe effect. Press and hold the LED/power button (J) to turn off the LED light (K).

#### Product Specifications

Name	ChargeUp Explorer 200
<b>Battery Capacity</b>	11.1V/23,400mAh/259.74Wh
<b>Item Number</b>	CY3838CYGEN
<b>USB-C Output</b>	5.0V=3.0A (15.0W)
	9.0V=3.0A (27.0W)
	12.0V=3.0A (36.0W)
	15.0V=3.0A (45.0W)
<b>USB-C Input</b>	20.0V=3.0A (60.0W Max)
	5.0V=3.0A (15.0W)
	9.0V=3.0A (27.0W)
	12.0V=3.0A (36.0W)
<b>USB-A Output 1</b>	15.0V=3.0A (45.0W)
	20.0V=3.0A (60.0W Max)
	5.0V=2.4A (12.0W Max)
	5.0V=2.4A (12.0W Max)
<b>USB-A Output 2</b>	5.0V=3.0A (15.0W)
	9.0V=2.0A (18.0W)
	12.0V=1.5A (18.0W Max)
<b>USB-A Output 3</b>	9.0-12.6V=10.0A Max
	9.0-12.6V=10.0A Max
<b>DC Output (DC5525)</b>	12.0-24.0V=5.0A (60.0W Max)
<b>DC Input (DC5521)</b>	AC 240V, 50Hz, 200W Max
<b>AC Output 1</b>	AC 240V, 50Hz, 200W Max
<b>AC Output 2</b>	AC 240V, 50Hz, 200W Max
<b>Total Output</b>	200.0W Max